

Adjust the Zero position on the Draw Depth Gauge

To adjust the zero position of your draw depth gauge, use an unused cap and place it under the brass holder. Gently push the cap into the cylinder from the bottom and when all is stable, press the zero button.

It is possible that you would like to adjust the height of the brass cylinder, this can be done with the grub screw on the side.

Please do not hesitate to contact our office should you require any additional assistance.

Kind regards,

Eric St.Martins
Sales Manager
S.I. Instruments Pty Limited